


EN HOW TO INSTALL DOUBLE-SIDED OUTDOOR X-BANNER (ASSEMBLY GUIDE)


DE AUFBAUANLEITUNG FÜR OUTDOOR X-BANNER

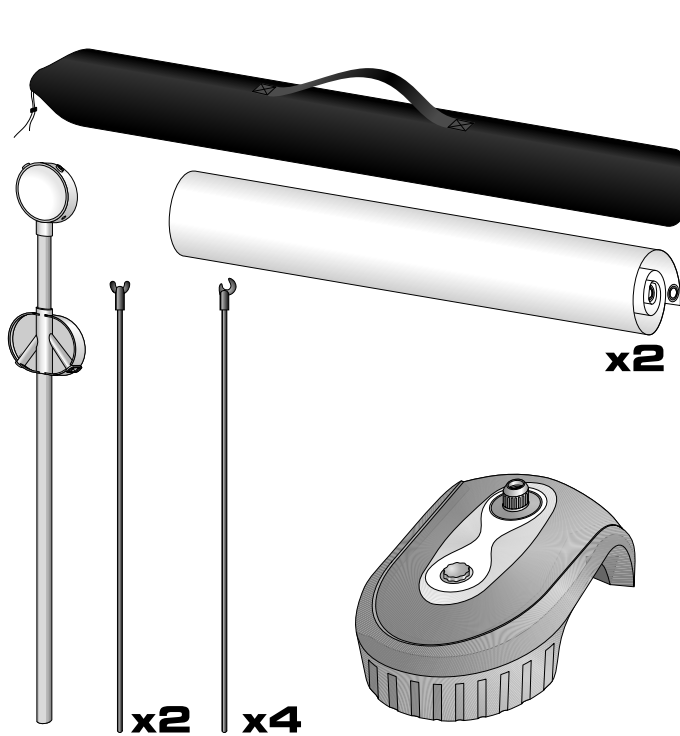


1

- EN The double-sided outdoor X-banner set contains:
- soft black carry bag
 - plastic fillable base
 - aluminium pole
 - fibre poles - 6 pcs
 - graphics - 2 pcs


- DE Outdoor X-Banner Set besteht aus:
- leichter Tragetasche
 - Plastikbodenplatte
 - Alumast
 - Fiberglasmasten - 6 St.
 - Druck - 2 St.

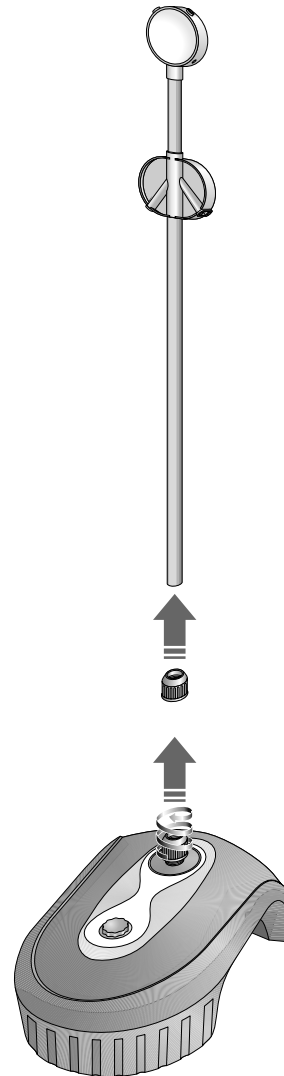


2

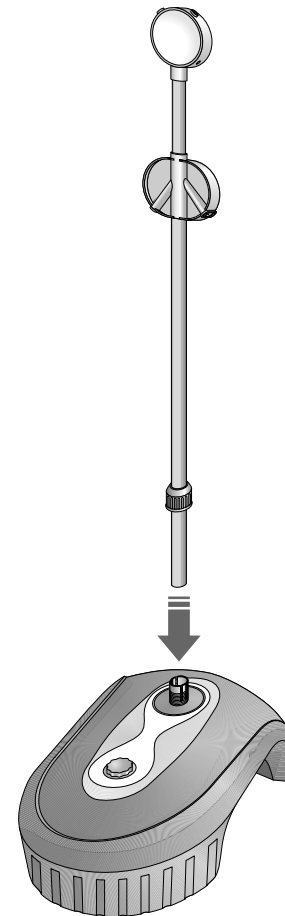


3

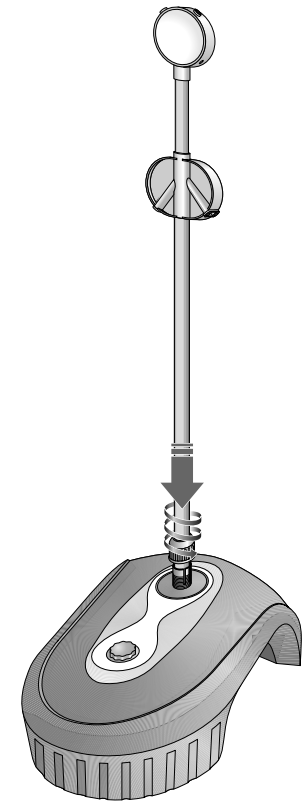

4

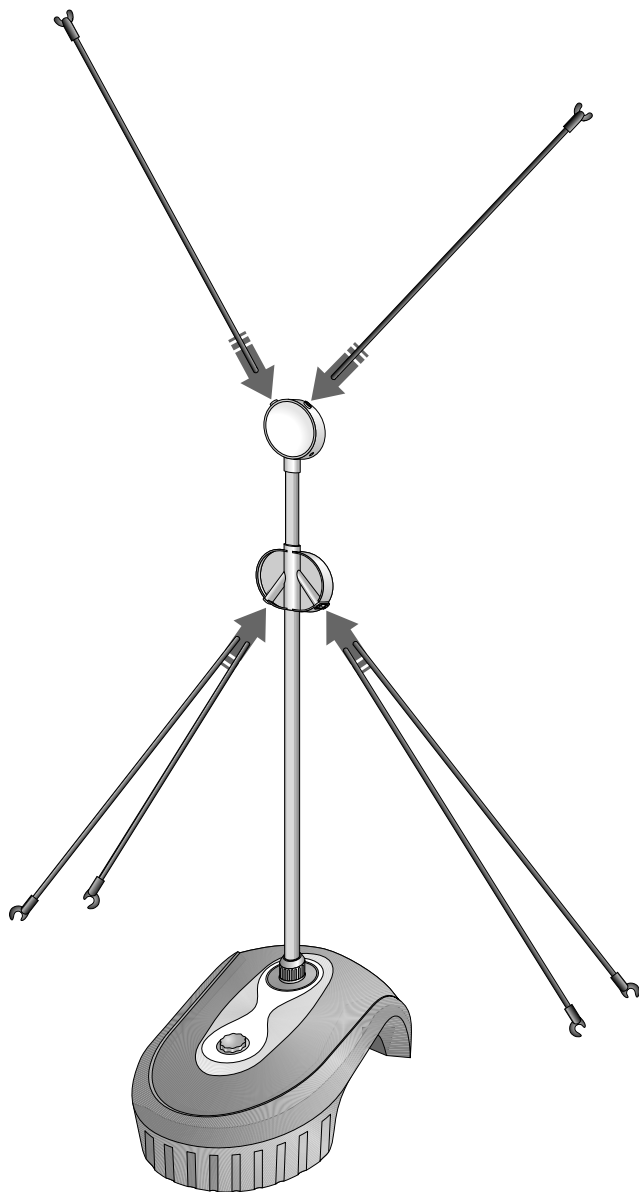


5

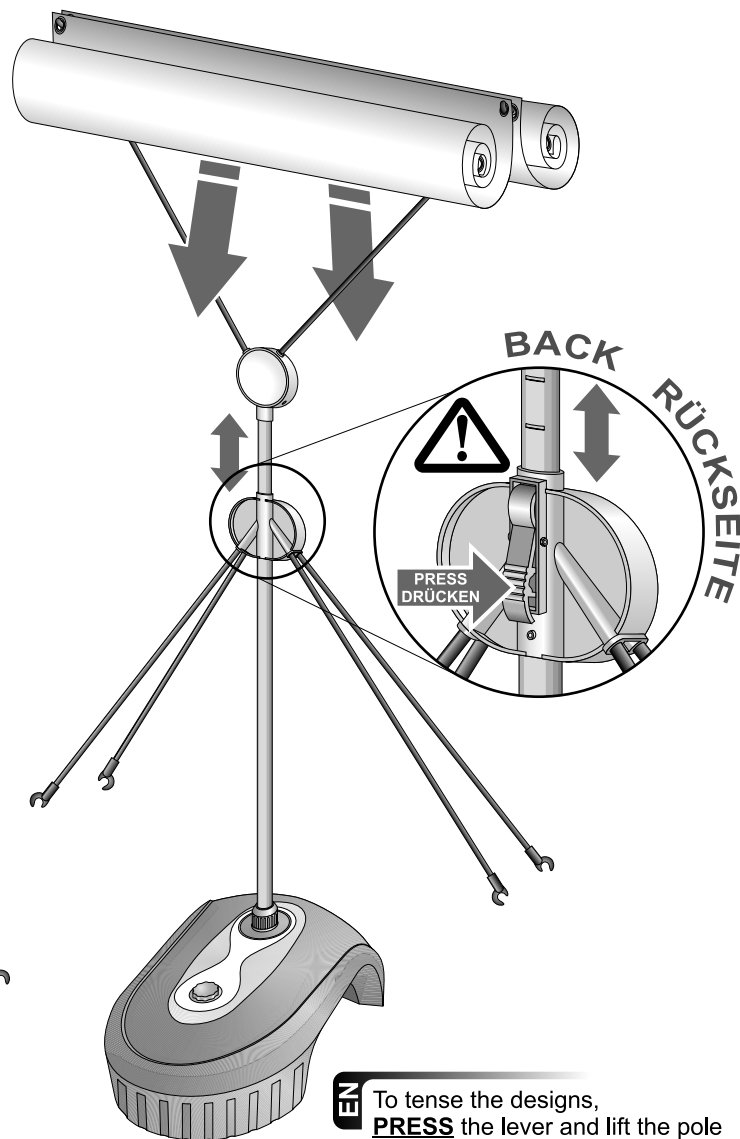

6

EN To tense the designs, **PRESS** the lever and lift the pole to the required height.

DE Damit die Drucke aufgespannt werden können, bitte den Hebel **DRÜCKEN** und den Mast auf gewünschte Höhe herausziehen.

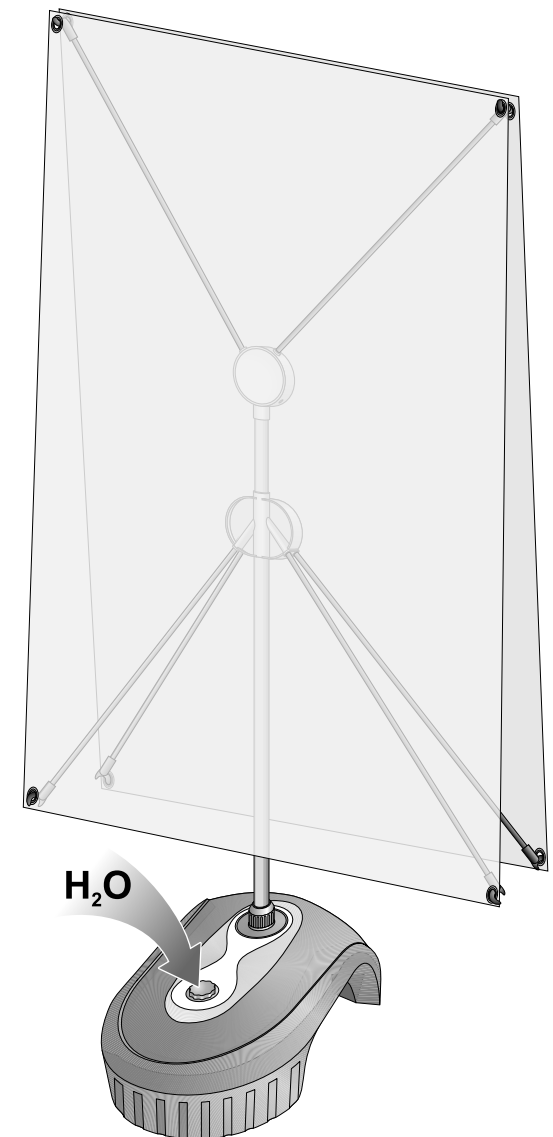

7